


PART IDENTIFICATION NUMBERS FOR SERIES "MHH" HYDRAULIC CYLINDERS

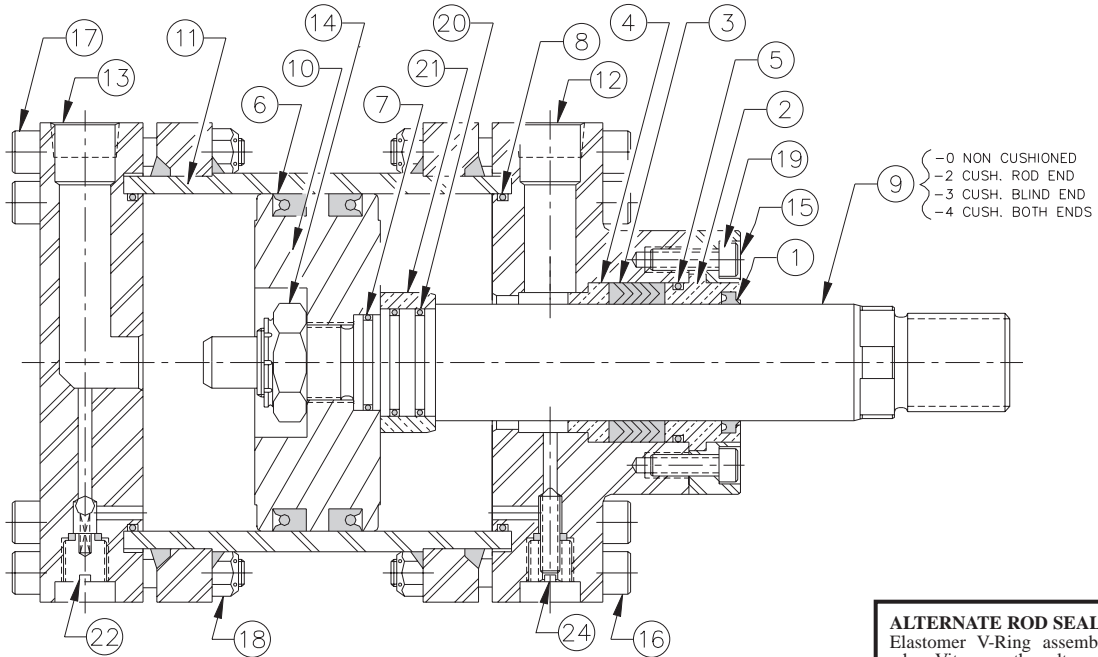

-0 NON CUSHIONED
-2 CUSH. ROD END
-3 CUSH. BLIND END
-4 CUSH. BOTH ENDS

ALTERNATE PISTON CONSTRUCTION
Construction method used to secure Piston is determined by space available

ALTERNATE PISTON DESIGN
Filled teflon wear ring available

ALTERNATE PISTON SEALS
'O' Ring energized filled teflon seal with filled teflon wear ring.

Elastomer block vee cup seals with back-up washers are provided when Viton or other alternate seal material is required.

ALTERNATE ROD SEALS
Elastomer V-Ring assembly is provided when Viton or other alternate seal material is required.

Self-energizing polyurethane cup seal.

ORDER INFORMATION REQUIREMENTS
When ordering replacement parts, clearly specify the item number, name, and quantity of the desired component. It is essential to provide the correct model and serial number of the cylinder in which the parts will be used. By providing both numbers, a cross check of reference data can be made to assure accurate fulfillment of order requirements.

BASIC PARTS LIST

ITEM NUMBER PART NAME

- 1Rod Wiper
- 2Rod Bearing - Outer
- 2PRod Bearing (Opt.)
- 2VRod Bearing (Opt.)
- 3Rod Packing Set (Std.)
- 3PPolyurethane Rod Seal (Opt.)
- 3VElastomer V-Ring Rod Pkg. Set (Opt.)
- 4Rod Bearing - Inner
- 5O-Ring, Brg. To Head
- 6Polyurethane Piston Seals (Std.)
- 6BBlock Vee Piston Seals (Opt.)
- 6TEnergized Teflon piston Seal (Opt.)
- 6WFilled Teflon Wear Ring (Opt.)
- 7O-Ring, Rod To Piston
- 8O-Ring, Tube Seal
- 9Piston Rod
- 10Piston
- 11Tube Assembly
- 12Front Head
- 13Rear Head
- 14Piston Nut

ITEM NUMBER PART NAME

- 15Bearing Cap
- 16Front Head Bolt
- 17Rear Head Bolt
- 18Locking Hex Nuts
- 19Bearing Cap Screws
- 20O-Ring, Rod To Bushing
- 21Cushion Bushing
- 22Cushion Screw Assembly
- 23Wave Spring
- 24Ball Check Assembly
- 25Support Ring (Opt.)
- 26Locking Pin
- 27“C” Rect. Front Flange Plate (For Front Flange Mount Cylinder Only)
- 28Back-up Washers (For 6B)

(*) Model number code letter used to indicate mounting style should be included with item number to describe part.
Example: Item 12-A Front Head w/Foot Mounting.

SERVICE PARTS MAY BE ORDERED AS FOLLOWS:

- SEAL KIT:** Series “MHH” - Consists of item numbers 1, 3, 6, and 8.
 - SEAL KIT w/BEARING:** Series “MHH” - Consists of item numbers 1, 2, 3, 4, 6, and 8.
 - CARTRIDGE ASSEMBLY:** Series “MHH” - Consists of item numbers 1, 2, 3, and 4.
- NOTE: LYNAIR will substitute alternate rod or piston seals per our record of original construction.
- PISTON AND ROD ASSEMBLY:** Consists of item numbers 6, 7, 9, 10, 14, 20, and 21 as required.

NOTE: Ordered parts will be supplied to suit construction details indicated by record data of original serial number.

LYNAIR, INC.

3515 Scheele Drive P.O. Box 720
Jackson, Michigan 49204
Phone (517)787-2240 FAX (517)787-4521